

## INSTALLING THE PRINTER DRIVER

1. Connect the LM-390A/PC (MK9-USB) to the computer with USB cable, then turn it on. Select printed material.
2. Press OPTION .  
The [**PC connection / OPTION setting screen**] appears.
3. Press ▲/▼ key to select "**DIRECT PRINTING FROM PC**".
4. Press ENTER.
5. Press ◀/▶ key to select "YES".  
Press ENTER.
6. A message is displayed, which shows the machine is ready to receive data from PC.
7. Insert the included WinSign CD into the computer.
8. Start installing the printer driver, by clicking the "Install the MK9-USB driver".
9. Proceed with the installation process, according to the message displayed on the computer.

```
DATA FILE TRANSFER
                FROM PC
DIRECT PRINTING
                FROM PC
OPTION
```

```
DATA FILE TRANSFER
                FROM PC
DIRECT PRINTING
                FROM PC
OPTION
```

```
DELETE
INPUTTING FILE

  YES      NO
```